

# **iBible**

@hearing.the.Word.brings.forth.faith

## **iBible C5/C7 User Guide**

 
**“Lord, to whom shall we go? Thou hast the words of eternal life.”**

**“Thy word is a lamp unto my feet, and a light unto my path.”**



 
# User's Guide English Version 1.0

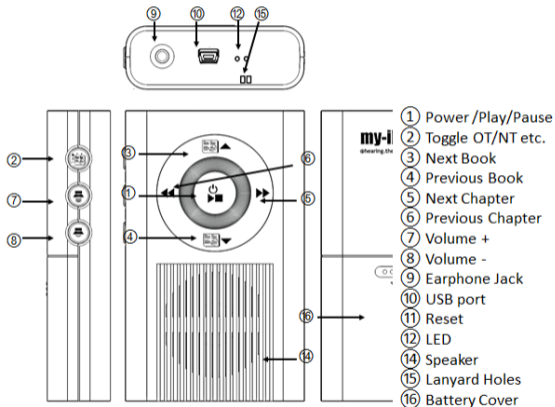

## IBible C5





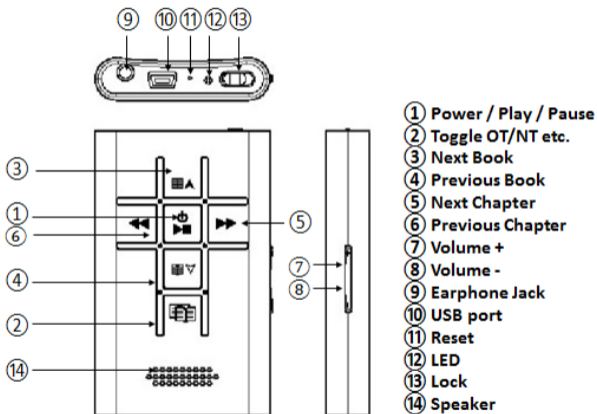




# User's Guide English Version 1.0





## IBible C7




Buttons	What It Does	Usage Tips
	Power / Play / Pause (PPP)	<p>Press to turn the device on. Press briefly to toggle between Play and Pause modes.</p> <p>To power off, leave it in Pause mode and it will automatically power off after 3 minutes.</p> <p>Or press and hold the PPP button for 2 seconds and the device will power off.</p> <p>When switched off, the device will remember the current position in the narration and the current volume level.</p>
	Toggle between OT/NT	<p>Press briefly to skip from OT to Psalms to NT and to any extra audio content.</p> <p>Long Press to switch between same chapter of different Parallel Bibles within the same device (applicable to selected C5 and C7 models).</p>

Buttons	What It Does	Usage Tips
<p>③  </p>	<p>Book + (next book)</p>	<p>Press briefly to skip from current to next book (e.g. Genesis to Exodus).</p> <p>Note: The book of Psalms has been separated into 5 sub-books (about 30 chapters per sub-book) for fast and easy access, i.e. Psalms 1–29 (1<sup>st</sup> sub-book), Psalms 30–59 (2<sup>nd</sup> sub-book), Psalms 60–89 (3<sup>rd</sup> sub-book), Psalms 90–119 (4<sup>th</sup> sub-book), and Psalms 120–150 (5<sup>th</sup> sub-book).</p> <p>Long press will promptly activate the ‘Repeat Chapter’ function. To deactivate, press any other button e.g. Next Chapter.</p>
<p>④  </p>	<p>Book – (previous book)</p>	<p>Press briefly to skip from current book to beginning of the previous book.</p>
<p>⑤  </p>	<p>Chapter + / Scroll forward</p>	<p>Press briefly to skip to the next chapter. Press and hold for forward scroll.</p>

Buttons	What It Does	Usage Tips
	Chapter - / Scroll back	Press briefly to skip to the previous chapter. Press and hold for backward scroll .
	VOL +	Volume + (increase). Press briefly to increase the volume a small amount. Press and hold to continually increase the volume.
	VOL -	Volume – (decrease). Press briefly to decrease the volume a small amount. Press and hold to continually decrease the volume.  The device remembers the volume when it is switched off, so beware that if the volume level is turned low before switching off, you may not hear it playing when it is switched on again in a noisier environment.
	Earphone Jack	Any standard Stereo 3.5mm jack 32Ω earphones. Mobile earphones and iPhone earphones (with microphones) cannot be used (Earphone not included).

Buttons	What It Does	Usage Tips
	Earphone Jack - continued	It is advisable to reduce the volume before using earphones and then increase the volume to a comfortable level once the earphones have been inserted.
	Mini B USB port	This port is for charging the internal lithium rechargeable battery. A computer cannot normally communicate with the C5/C7 via this USB connection.  Any mobile phone charger with type A USB port can be used also to recharge the device with supplied USB cable.
	Reset	This is to reset the device (applicable to C7).
	LED	LED Indicators: - Blue Flashing — Device in play mode - Blue Continuous — Device in pause mode - Red Continuous— Internal battery is being charged. Switches off when charging is complete.

Buttons	What It Does	Usage Tips
<p style="text-align: center;">⑫</p>	<p style="text-align: center;">LED — continued</p>	<p>Charging the battery: The device will peep once per second as the red LED flashes to indicate that a recharge is needed. The device will power itself off after one minute. Device will switch off to pause mode, press PLAY again to play while charging.</p> <p>While charging and USB cable plugged out, device will display red LED.—press PPP 2 seconds to play and PPP to switch off. .</p>
<p style="text-align: center;">⑬</p> 	<p style="text-align: center;">LOCK (C7 only)</p>	<p>LOCK switch. This is to prevent accidental activation of buttons when device is placed in pockets or handbags.</p> <p>When the LOCK is on, the device in Play mode will not respond to any button presses.</p> <p>When device in Off mode and LOCK is activated, the buttons will not be activated when pressed, including the PPP button.</p>



## **PRODUCT WARRANTY**

This warranty is valid in respect only to **iBible / my-iBible** products purchased locally and through authorized my-iBible distributors or dealers; otherwise the warranty is considered invalid.

This warranty guarantees the equipment to be free from defects in workmanship and materials under normal use for a period of 1 year from the date of purchase by the original end-user purchaser and is not transferable. This limited warranty DOES NOT COVER finishes and external parts such as buttons and other attachments, consumable parts, and cleaning. In no event shall "**the story box**" be liable for breach of any obligations to the purchaser or user of the equipment for any special, incidental or consequential damages, including but not limited to the loss of profit and revenues, anticipated or otherwise, loss of the equipment, damage to the equipment, any loss relating to facilities or service of capital, cost of substitution of equipment, loss due to downtime cost or claims of the purchaser or users of the equipment for such damages caused by any defective equipment whether such defective equipment are warranted against or not. Internal/removable batteries are warranted for a limited period of 6 months from date of purchase.

## **GENERAL TERMS AND CONDITIONS**

1. Your unit and components contained therein are fully warranted against defective material and manufacturing faults under our product warranty guide from date of purchase.
2. To obtain warranty protection, notice of the alleged defects must be given promptly upon discovery to our service personnel at the time of service.
3. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such a decision. Any unit or defective part which has been replaced shall become our property.
4. The terms and conditions of this warranty shall be contained exclusively in this document and no other presentation of provision, either written or otherwise, regardless of the origin of the same, shall be accepted as either adding or subtracting from these terms and conditions.
5. "the story box" reserves the right to charge a service fee for out of warranty repair/service of any nature and shall not be deemed liable if the conditions are not met.
6. This warranty shall exclude request pertaining to all refund, replacement, or exchange.
7. Products that are found to be corroded shall immediately render the warranty as void.

**The following are not covered under this warranty:**

1. Damage resulting from accidents, misuse, abuse, alteration, tampering, or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Defects or damage due to spillage of food/liquids or wrong usage of electrical supply and voltage.
3. Damage, losses, defects, or malfunction as a result of accident, misuse, fire, flood, earthquake, or other external natural disasters or causes.
4. Normal wear and tear, corrosion, rusting, or stains.
5. Defects and damage arising from improper testing, operation, demonstration, maintenance, installation, adjustment, or any alteration or modification of any kind.
6. Scratches and damages to the outer surface areas and externally exposed parts that are due to normal customer use.
7. General maintenance, routine servicing, and onsite tuning or adjustments.
8. Any equipment/product that has its warranty label sticker removed or made illegible or that has been tampered with.
9. If the warranty card is altered, defaced, or erased in any manner whatsoever.
10. Products purchased from unauthorized dealers, distributors, or overseas.

# iBible

@hearing.the.Word.brings.forth.faitH

## iBible C5/C7

### 使用說明/保證書1.0

 
"主啊，你有永生之道，我們還歸從誰呢？"

"你的話是我腳前的燈，是我路上的光。"



 
# 使用說明/保證書 1.0



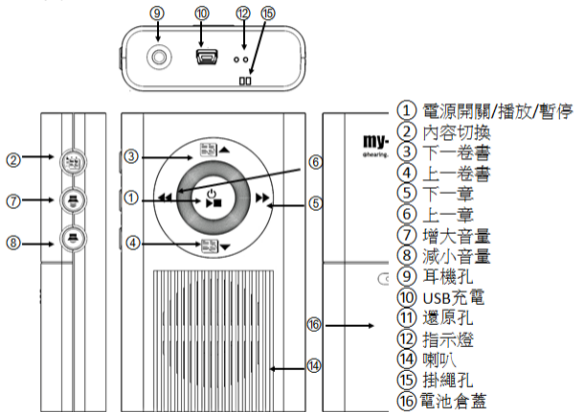


## iBible C5

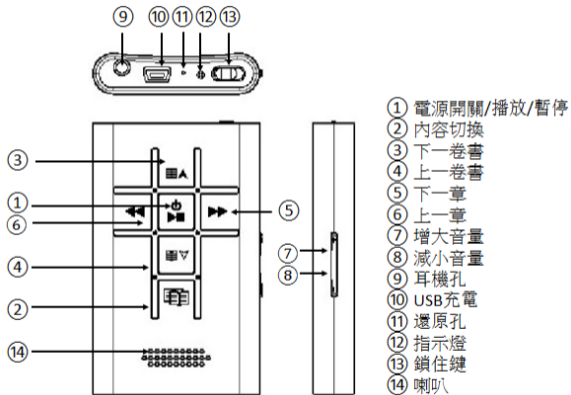

# 使用說明/保證書 1.0



## iBible C7



按鍵	功能	使用方法
① 	電源開關/ 播放/暫停 - 以下簡稱PPP	短按「開機」與播放/暫停之間切換。 進入暫停模式三分鐘自動關機或長按兩秒鐘關機。 關機時機器將自動記憶當時播放位置和音量大小。
② 	內容切換	在 <u>舊約</u> 、 <u>詩篇</u> 、 <u>新約</u> 之間切換，或者其他內容間相互切換。 有兩本聖經內容時，長按此按鍵，可以實現兩本聖經的同一章節之間相互切換。
③  ▲	下一卷書	從目前的書卷切換到下一卷書。(如： <u>創世記</u> 到 <u>出埃及記</u> )。
④  ▼	上一卷書	從目前的書卷切換到上一卷書。
⑤ 	下一章/快進	短按-1秒鐘：下一章。 長按-2秒鐘：可在本章中快進。

按鍵	功能	使用方法
⑥ ◀◀	上一章/快退	短按 1秒鐘：上一章。 長按 2秒鐘：可在本章中快退。
⑦ ◀+	增大音量	增大音量。 長按 ◀+ 按鍵可以連續增大音量。
⑧ ◀-	減小音量	減小音量。 長按 ◀- 按鍵可以連續減小音量。
⑨ 	耳機孔	「耳機」為自購用品，請使用標準的3.5mm耳機。
⑩ 	USB 充電	使用標準PC或是充電器USB 5V 充電。
⑪	復位孔 (C7專屬)	重啟設備。



按鍵	功能	使用方法
⑫  	指示燈	<p>藍色閃動：機器開機中。            藍色長亮：機器暫停中。            紅色閃動：需要通過USB介面進行充電。            請注意，當電池需要充電時，指示燈會閃爍，短促“滴滴”提示音。            在充电过程中，中途拔出充电器，机器会显示红灯，如果要关闭红灯，请长按开机键2秒钟，红灯熄灭，蓝灯亮，然后，再请长按开机键2秒钟关机，蓝灯和红灯熄灭。</p>
⑬  	按鍵鎖	<p>防止機器放置在口袋或手袋時，按鍵被意外按下。            在開機和鎖按鍵的狀態下，所有按鍵都失效。</p>
⑭	內置揚聲器	<p>忠告：不要將揚聲器放得太靠近耳朵。</p>

## 產品保修說明書

此份保修說明書只適用於在**iBible / my-iBible**授權的當地經銷商處購買的產品，如果不具備以上條件，是不能享受保修服務的。

此份保修說明書確定購買人所購買的合格產品（沒有製造或使用的缺陷）自購買日起享受一年的保修服務，此產品保修說明書不能轉讓給他人。此保修書的服務專案不包含外觀和按鍵等外部件，以及其它配件和消耗品，也不包含清洗服務。**the story box**沒有義務承擔由購買者或產品使用者故意損壞產品造成的損失，這種損失包括預期收益虧損、產品丟失、產品損壞，與資金相關的服務或產品的損失、換新費用、宕機成本或購買者聲稱因本品的損壞導致其他物品損壞等。

### 保修條款及注意事項

1. 購買的零件或產品自購買日起就享受保修服務，此保修服務是針對產品的材料和製造缺陷。
2. 為了保障購買者的保修權利，請購買者在發現購買的產品有缺陷時，在工作時間聯繫我們的售後人員。
3. 因產品缺陷（製造或材料問題）所引起的投訴，**the story box** 擁有最終決定權。購買者應當認可或同意我們的決定，所有被替換下來的缺陷產品和零件歸 **the story box** 所有。

4. 此保修說明書中所包含的保修條款及注意事項是專用的，如果其它檔涉及相關內容，那則視為摘錄或引用。
5. **the story box** 權對保修條款範圍以外的維修服務收取費用。
6. 此保修書不涉及退款、換貨等要求。
7. 此保修書對生鏽或腐蝕的產品無效。

### 以下情況不在此保修書範圍之內：

1. 沒有按照產品操作說明書而對產品進行不當操作、改造等引起的損壞。
2. 因食品或液體溢出，及使用不正確的電源所引起的損壞和故障。
3. 由意外、濫用、火災、洪水、地震或其它自然災害所造成的損壞和故障。
4. 正常的磨損、腐蝕、生鏽或污漬。
5. 因不當的測試、操作、演示、維修、安裝等所造成的損壞和故障。
6. 因正常使用對產品表面或裸露在外部份造成的刮傷和磨損。
7. 一般維修、日常保養或現場調試。
8. 產品的保修貼紙被去除、篡改或無法辨認的產品。
9. 保修卡被塗改、汙損或撕毀的產品。
10. 從未授權的供應商、經銷商或海外購買的產品。

## **the story box**

my mailbox 888441

Singapore 919191

my.ibible@gmail.com

webmaster@ibible.xyz

<http://iBible.Asia> / <http://my-iBible.com>

Inquiries or product registration at these websites:

任何問題請登錄或發電子郵件到 以上的網站：

