

my-iBible

@hearing.the.Word.brings.forth.faith

m5 + m7 User Guide

 
“Lord, to whom shall we go? Thou hast the words of eternal life.”

“Thy word is a lamp unto my feet, and a light unto my path.”

 


User's Guide English Version 2.0

iBible m7

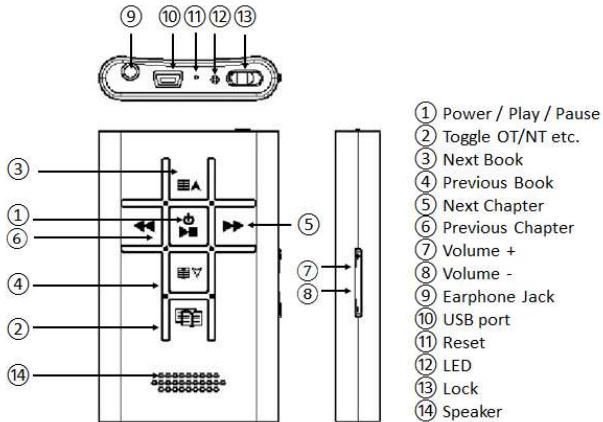


 


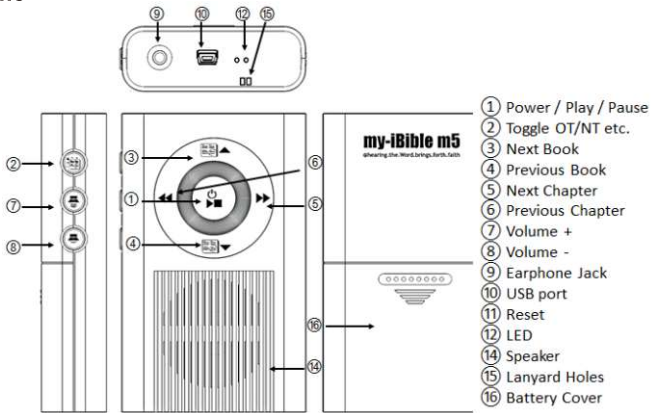iBible m5



Feature Summary:

1. Portability – small and light to be carried anywhere, any time.
2. Clarity – full and crisp sound quality.
3. Vast contents capacity.
4. Up to 8 bookmarks can be saved for fast access to points of interest.
5. Go Back – reverts to last place before accidental button press.
6. Earphone Spatial Processing / QuickSwitch™ for Parallel Bibles™

Buttons	What It Does	Usage Tips
	Power / Play / Pause (PPP)	<p>Press to turn the device on.</p> <p>Press briefly to toggle between Play and Pause modes.</p> <p>To power off, leave it in Pause mode and it will automatically power off after 5 minutes.</p> <p>Or, press and hold the PPP button for 2 seconds and the device will power off.</p> <p>When switched off, the device will remember the current position in the narration and the current volume level.</p>




Buttons	What It Does	Usage Tips
	Toggle between OT/NT	Press briefly to skip from OT to Psalms to NT and to any extra audio content.
	Book + (next book) / Bookmark + (see below for details on Bookmark)	Press briefly to skip from current to next book (e.g. Genesis to Exodus). Note: The Book of Psalms has been separated into 5 sub-books (about 30 chapters per sub-book) for fast and easy access, i.e. Psalms 1 - 29 (1st sub-book), Psalms 30 - 59 (2nd sub-book), Psalms 60 - 89 (3rd sub-book), Psalms 90 - 119 (4th sub-book), Psalms 120 - 150 (5th sub-book).
	Book – (beginning of previous book)	Press briefly to skip from current book to beginning of the previous book. (Bookmark features – please see below for more details)


Buttons	What It Does	Usage Tips
⑤ ▶▶	Chapter + / Scroll forward	Press briefly to skip to the next chapter. Press and hold for forward scroll.
⑥ ◀◀	Chapter - / Scroll back	Press briefly to skip to the previous chapter. Press and hold for backward scroll.
⑦ ◀+	VOL +	Volume + (increase) – press briefly to increase the volume a small amount. Press and hold to continually increase the volume.
⑧ ◀-	VOL -	Volume – (decrease) – press briefly to decrease the volume a small amount. Press and hold to continually decrease the volume. The device remembers the volume when it is switched off, so beware that if the volume level is turned low before switching off, you may not hear it playing when it is switched on again in a noisier environment.

Buttons	What It Does	Usage Tips
⑨	Earphone Jack (Earphone is not included)	<p>Any standard Stereo 3.5mm jack 32Ω earphones. Mono-earphones and iPhone earphones cannot be used.</p> <p>It is advisable to reduce the volume before using earphones and then increase the volume to a comfortable level once the earphones have been inserted.</p>
⑩	USB port	This port is for charging the internal lithium rechargeable battery. A computer cannot normally communicate with the m7 via this USB connection.
⑪	Reset	This is to reset the device.
⑫	LED	<p>LED indicators:</p> <ul style="list-style-type: none"> • Blue continuous – Device on. • Blue flashing – you need to charge the battery by plugging the m7 into a powered USB port.

Buttons	What It Does	Usage Tips
⑫	LED	<ul style="list-style-type: none"> • Red continuous – internal battery is being charged. Switches off when charging is complete. <p><u>Charging the battery:</u> The device will beep once per second as the blue LED flashes to indicate that a recharge is needed. The device will power itself off after one minute.</p>
⑬	LOCK	<p>LOCK switch – this is to prevent accidental activation of buttons when the device is placed in pockets or handbags. When the LOCK is on, the device will not respond to any button presses.</p>

Buttons	What It Does	Usage Tips
⑦/⑧ +⑥ ◀+◀◀	Go Back	If you accidentally press the wrong button and lose your place, then use this feature to get back to where you were. Press and hold Vol+⑦ or Vol- ⑧ just before pressing ⑥.
⑦+⑧ ◀+◀-	Repeat Chapter (short press)	Press both buttons together to activate the feature. A short beep will sound to indicate the Repeat Chapter feature being activated. The chapter will be repeated until the feature is deactivated. To deactivate this feature, just skip to another chapter, or power the device off and then on again.
⑦+⑧ ◀+◀-	Earphone Spatial Processing (long press)	<u>Applicable for earphone listening only</u> – Earphone Spatial Processing removes the apparent source of sound from inside your head to outside your head. Earphone Spatial Processing is off by default. You can activate and de-activate by pressing ⑦+⑧ for 1 second.

  	<p>Earphone Spatial Processing (long press)</p>	<p>If audio played through the speaker seems to have an echo, it is likely that the Earphone Spatial Processing has been activated. To de-activate, press ⑦+⑧ for 1 second, or switch the device off and on again.</p>
	<p>QuickSwitch™ (long press)</p>	<p>QuickSwitch™ allows quick access to same chapter in different narrations in Parallel Bibles™ models.</p>
	<p>Bookmarking (BM) (long press)</p>	<p>When in Play mode, to bookmark the current position in the narration, press and hold ② for 1 second. A short beep should be heard as the current position is saved.</p> <p>You can bookmark up to 8 different positions in the narration. The bookmarks are ordered in a loop.</p>
	<p>Previous BM (BM-) (long press)</p>	<p>When in Play mode, press BM- for 1 sec to access the previous bookmark. A short beep will sound.</p> <p>The next time you bookmark a position, it will overwrite this bookmark.</p>

	<p>Next BM (BM+) (long press)</p>	<p>When in Play mode, press BM+ for 1 sec to access the next bookmark. A short beep will sound.</p> <p>The next time you bookmark a position, it will overwrite this bookmark.</p>
---	---	--

TROUBLESHOOTING

Problem:

1. The device does not respond to any button presses.
2. The device does not play.

Possible Solutions:

- A. Check that the button LOCK ⑬ is off.
- A. Check that the button LOCK⑬ is off.
- B. Turn the volume up.
- C. Make sure that the device is fully charged.
- D. Press Reset ⑪ with a paper clip or pin.

PRODUCT WARRANTY

This warranty is valid only in respect of my-iBible products purchased locally & through authorized my-iBible distributors or dealers, otherwise the warranty is considered invalid.

This warranty guarantees the equipment to be free from defects in workmanship

and materials under normal use for a period of 1 year from the date of purchase by the original end user purchaser and it is not transferable. Internal and/or removable rechargeable batteries are warranted against a period of 6 months from date of purchase. This limited warranty DOES NOT COVER finishes and external parts such as buttons and other attachments, consumable parts and cleaning. In no event shall 'the story box' be liable for breach of any obligations to the purchaser or user of the equipment for any special, incidental or consequential damages, including but not limited to the loss of profit and revenues, anticipated or otherwise, loss of the equipment, damage to the equipment, any loss relating to facilities or service of capital, cost of substitute of equipment, loss due to downtime cost or claims of the purchaser or users of the equipment for such damages caused by any defective equipment whether such defective equipment are warranted against or not.

GENERAL TERMS AND CONDITIONS

1. Your unit and components contained therein are fully warranted against defective material and manufacturing faults under our product warranty guide from date of purchase.
2. To obtain warranty protection, notice of the alleged defects must be given promptly upon discovery to our service personnel at the time of service.
3. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to

abide by such a decision. Any unit or defective part which has been replaced shall become our property.

4. The terms and conditions of this warranty shall be contained exclusively in this document and no other presentation of provision, either written or otherwise, regardless of the origin of the same, shall be accepted as either adding or subtracting from these terms and conditions.
5. 'the story box' reserves the right to charge a service fee for out of warranty repair/service of any nature and shall not be deemed liable if the conditions are not met.
6. This warranty shall exclude request pertaining to all refund, replacement, or exchange.
7. Products that are found to be corroded shall immediately render the warranty as void.

The following are not covered under this warranty:

1. Damage resulting from accidents, misuse, abuse, alteration, tampering or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Defects or damage due to spillage of food/liquids or wrong usage of electrical supply & voltage.

3. Damage, losses, defects or malfunction as a result of accident, misuse, fire, flood, earthquake or other external natural disasters or causes.
4. Normal wear and tear, corrosion, rusting or stains.
5. Defects & damage arising from improper testing, operation, demonstration, maintenance, installation, adjustment or any alteration or modification of any kind.
6. Scratches & damages to the outer surface areas and externally exposed parts that are due to normal customer use.
7. General maintenance, routine servicing and onsite tuning or adjustments.
8. Any equipment/product which has its warranty label sticker removed or made illegible/tampered.
9. If the warranty card is being altered, defaced or erased in any manner whatsoever.
10. Products purchased from unauthorized dealers, distributors or overseas.

PLEASE LOG ON <http://www.my-ibible.com/support.html>
TO REGISTER ONLINE
OR email to: info@my-iBible.org / my.ibible@gmail.com



6. 此保修書不涉及退款、換貨等要求。
7. 此保修書對生鏽或腐蝕的產品無效。

以下情況不在此保修書範圍之內：

1. 沒有按照產品操作說明書而對產品進行不當操作、改造等引起的損壞。
2. 因食品或液體溢出，及使用不正確的電源所引起的損壞和故障。
3. 由意外、濫用、火災、洪水、地震或其它自然災害所造成的損壞和故障。
4. 正常的磨損、腐蝕、生鏽或污漬。
5. 因不當的測試、操作、演示、維修、安裝等所造成的損壞和故障。
6. 因正常使用對產品表面或裸露在外部份造成的刮傷和磨損。
7. 一般維修、日常保養或現場調試。
8. 產品的保修貼紙被去除、篡改或無法辨認的產品。
9. 保修卡被塗改、汙損或撕毀的產品。
10. 從未授權的供應商、經銷商或海外購買的產品。




任何問題請登錄到 <http://www.my-ibible.com/support.html>
或發電子郵件到 info@my-ibible.org / my.ibible@gmail.com



此份保修說明書確定購買人所購買的合格產品（沒有製造或使用的缺陷）自購買日起享受一年的保修服務，此產品保修說明書不能轉讓給他人。此保修書的服務專案不包含外觀和按鍵等外部件，以及其它配件和消耗品，也不包含清洗服務。'the story box' 沒有義務承擔由購買者或產品使用者故意損壞產品造成的損失，這種損失包括預期收益虧損、產品丟失、產品損壞，與資金相關的服務或產品的損失、換新費用、宕機成本或購買者聲稱因本品的損壞導致其他物品損壞等。

保修條款及注意事項

1. 購買的零件或產品自購買日起就享受保修服務，此保修服務是針對產品的材料和製造缺陷。
2. 為了保障購買者的保修權利，請購買者在發現購買的產品有缺陷時，在工作時間聯繫我們的售後人員。
3. 因產品缺陷（製造或材料問題）所引起的投訴，'the story box'擁有最終決定權。購買者應當認可或同意我們的決定，所有被替換下來的缺陷產品和零件歸 'the story box' 所有。
4. 此保修說明書中所包含的保修條款及注意事項是專用的，如果其它檔涉及相關內容，那則視為摘錄或引用。
5. 'the story box'有權對保修條款範圍以外的維修服務收取費用。

	<p>下一卷書 (長按)</p>	<p>在播放的時候，按住一秒鐘，就會播放下一記憶點的內容。此後按記憶點記錄，將會覆蓋當前記憶點的內容。例如：按下一記憶點，播放記憶點三的內容。在播放其他內容的時候，按下記憶點，記憶點三的內容就會被更新。</p> <p>選擇完成後會聽到“嗶”聲。</p>
	<p>上一卷書 (長按)</p>	<p>在播放的時候，按住一秒鐘，就會播放上一記憶點的內容。</p> <p>選擇完成後會聽到“嗶”聲。</p>
	<p>重設記憶點</p>	<p>按住一秒鐘，全部記憶點將都被重設。</p> <p>選擇完成後會聽到“嗶”聲。</p>

產品保修說明書

此份保修說明書只適用於在**iBible / my-iBible**授權的當地經銷商處購買的產品，如果 7
不具備以上條件，是不能享受保修服務的。





		<p>切換到其他的章或重新開機都會退出重複功能。</p>
<p>⑦+⑧ ◀+ ▶</p>	<p>空間化的音效 (長按)</p>	<p>只適用於用耳機收聽：虛擬出真實現場空間的聲音效果。</p> <p>本功能預設是關閉的，同時按住⑦ + ⑧一秒鐘將會啟動本功能。如果揚聲器出來的聲音帶有回聲，很有可能是啟動了本功能。再次同時按住⑦ + ⑧一秒鐘或重新開機都可以退出本功能。</p>
<p>② 📖📖</p>	<p>內容切換 (長按)</p>	<p>在播放的時候，按住一秒鐘，在聽到“嗶”聲後，當前位置會記錄在書籤中。</p> <p>總共有八個記憶點，記為記憶點一、記憶點二……記憶點八。</p> <p>當記憶點記錄完後，當前記憶點會自動變為下一個記憶點。例如在記憶點八記錄後，當前記憶點變為記憶點一。</p>

按鍵	功能	使用方法
⑫	指示燈	藍色閃動：需要通過USB介面進行充電。 紅色長亮：正在充電。充電完成後會熄滅。 請注意：當電池需要充電時，指示燈會閃爍，在設備關機前會每秒發出一次短促的嗶聲持續一分鐘。
⑬	按鍵鎖 (M7專屬)	防止機器放置在口袋或手袋時，按鍵被意外按下。 在開機和鎖按鍵的狀態下，所有按鍵都失效。長按PPP按鍵三秒鐘將會關機。
⑭	內置揚聲器	忠告：不要將揚聲器放得太靠近耳朵。
⑦/⑧ +⑥ ◀+◀	回復	回復 - 如果不小心按錯鍵而找不到所處狀態，就使用此功能回復原先狀態。在按6之前按住7或8。
⑦+⑧ ◀+◀	重複章 (短按)	同時按下後，會重複播放當前播放的章。當重複功能啟動時，會發出“嗶”聲。會連續播放當前章直到退出重複功能。



按鍵	功能	使用方法
⑤ ▶▶	上一章/快退	短按-1秒鐘：上一章 長按-2秒鐘：可在本章中快退
⑥ ◀◀	下一章/快進	短按-1秒鐘：下一章 長按-2秒鐘：可在本章中快退
⑦ ◀+	增大音量	增大音量。 長按 ◀+ 按鍵可以連續增大音量。
⑧ ◀-	減小音量	減小音量。 長按 ◀- 按鍵可以連續減小音量。
⑨	耳機孔	「耳機」為自購用品，請使用標準的3.5mm耳機。
⑩	USB充電	使用標準PC或是充電器USB 5V 充電。
⑪	還原孔 (M7專屬)	還原機器成出廠狀態。
⑫	指示燈	藍色長亮：機器開機中。

特色：

1. 超便攜性 - 小且輕，隨時隨地都可攜帶。
2. 聲音響亮而清脆。
3. 海量內容。
4. 具記憶點功能。

按鍵	功能	使用方法
	電源開關/ 播放/暫停 (以下簡稱PPP)	短按「開機」與播放/暫停之間切換。 進入暫停模式五分鐘自動關機或長按兩秒鐘關機。 關機時機器將自動記憶當時播放位置和音量大小。
	內容切換	在舊約、詩篇、新約之間切換，或者其他內容間相互切換。
	下一卷書	從目前的書卷切換到下一卷書。 (如：創世記到出埃及記)。
	上一卷書	從目前的書卷切換到上一卷書。

  
iBible m5

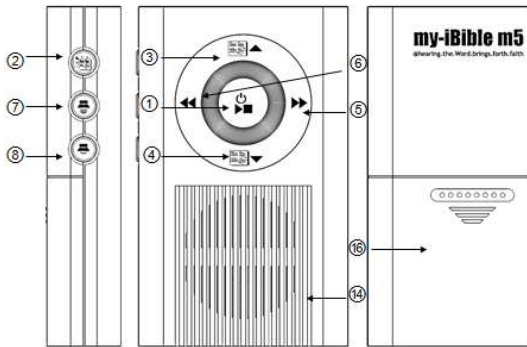

- ① 電源開關/播放/暫停
- ② 內容切換
- ③ 下一卷書
- ④ 上一卷書
- ⑤ 下一章
- ⑥ 上一章
- ⑦ 增大音量
- ⑧ 減小音量
- ⑨ 耳機孔
- ⑩ USB充電
- ⑪ 還原孔
- ⑫ 指示燈
- ⑬ 鎖住鍵
- ⑭ 喇叭
- ⑮ 掛繩孔
- ⑯ 電池倉蓋

使用說明/保證書2.0

 iBible m7

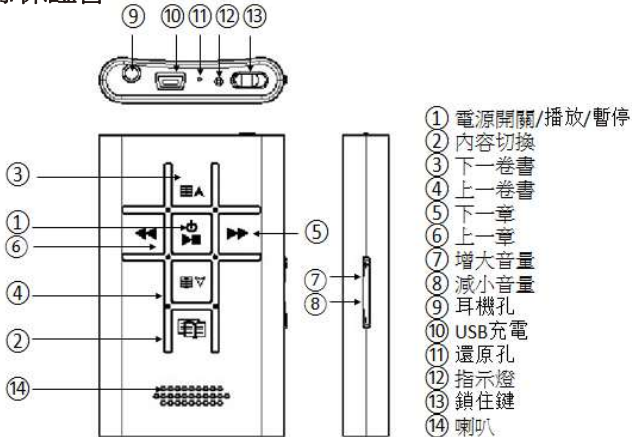

my-iBible

@hearing.the.Word.brings.forth.faith

m5 + m7

使用說明/保證書

“主啊，你有永生之道，我們還歸從誰呢？”
“你的話是我腳前的燈，是我路上的光。”

